


Programming your Wireless Keyless Entry


1

Locate the LEARN BUTTON on the back or side panel of the motor unit. You may need to remove a light cover or control center cover to gain access. This button will be red, orange, or purple in color and will have an LED indicator light next to it.

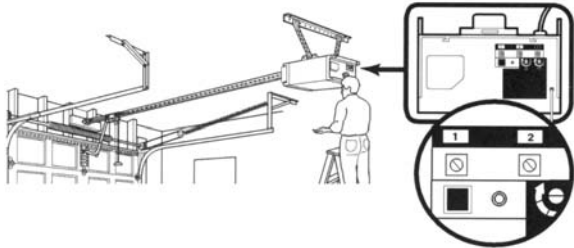


2

Press and release the LEARN BUTTON. This turns the receiver on for thirty seconds. Within this 30 second period, you must enter your new 4-digit PIN into the keypad and hold the ENTER button for five seconds.

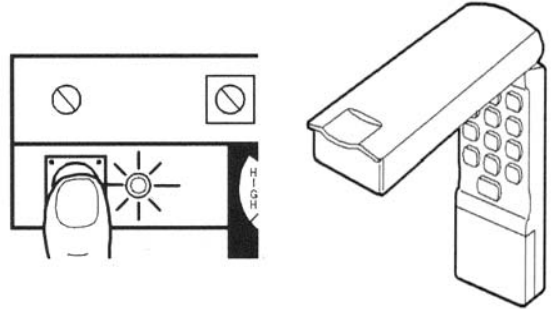

3

When the light on the keypad stops flashing, test your new code by entering the 4-digit PIN and ENTER.

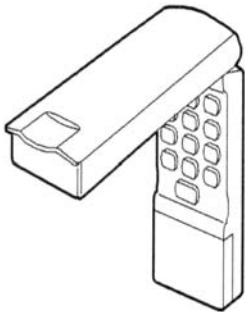

TO SET A TEMPORARY PIN

You may authorize access by visitors or service people with a temporary 4-digit PIN. After a programmed number of hours or number of accesses, this temporary PIN expires and will no longer open the door. It can be used to close the door even after it has expired. To set a temporary PIN:

1. Press the four buttons for your personal entry PIN (not the last temporary PIN), then press and hold the * button.

The opener light will blink three times. Release the button.

2. Press the temporary 4-digit PIN you have chosen, then press ENTER.

The opener light will blink four times.

3. To set the number of hours this temporary PIN will work, press the number of hours (up to 255), then press *.

OR

3. To set the number of times this temporary PIN will work, press the number of times (up to 255), then press #.

The opener light will blink once when the temporary PIN has been learned.

Test by pressing the four buttons for the temporary PIN, then press Enter. The door should move. If the temporary PIN was set to a certain number of openings, remember that the test has used up one opening. To clear the temporary password, repeat steps 1 -3, setting the number of hours or times to 0 in step 3.

SPECIAL NOTE: *The temporary password can ONLY be programmed to keypads working on a Chamberlain or LiftMaster Garage Door Opener. It WILL NOT work on keypads programmed to an external receiver.*

The temporary password will continue to CLOSE the door even after the time has expired. To eliminate this, program a new temporary password into the keypad.

TO CHANGE AN EXISTING, KNOWN PIN

If the existing PIN is known, it may be changed by one person without using a ladder.

1. Press the four buttons for the present PIN, then press and hold the # button.

The opener light will blink twice. Release the # button.

2. Press the new 4-digit PIN you have chosen, then press ENTER.

The motor unit lights will blink once when the PIN has been learned.

Test by pressing the new PIN, then press ENTER. The door should move.